


SWL = 1000LB

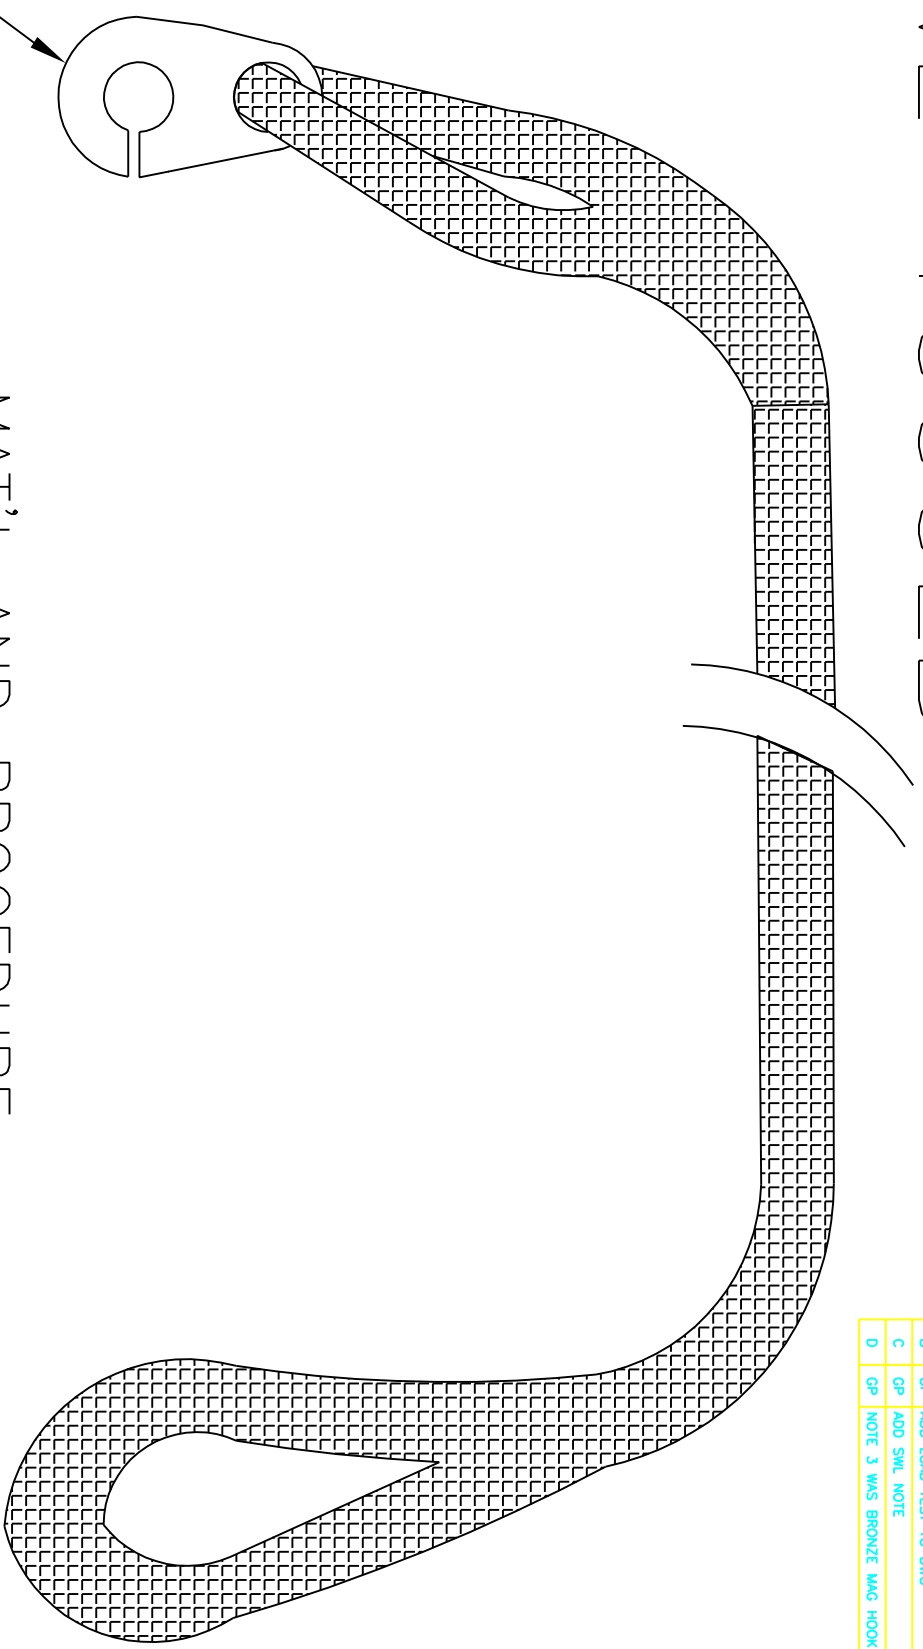

MAT'L AND PROCEDURE

1. 1/2" PLASMA ROPE X 40FT - PUGET SOUND ROPE # 12 STRAND X 1/2'0D
2. STAINLESS STEEL PART #1800 (3600LB SWL)  
(WEBSITE: [WWW.ELISHAWEBB.COM/BRUMMEL%20HOOKS.HTM](http://WWW.ELISHAWEBB.COM/BRUMMEL%20HOOKS.HTM))
3. ELECTRICAL TAPE
4. SEE VIDEO FOR SPlicing INSTRUCTIONS - LOCATED IN [I DRIVE] > [ENG FOLDER] [EQUIPMENT] > [PLASMA ROPE] > [SPlicing VIDEO]
5. LOAD TEST FINAL ASSEMBLY AT 2,000LB FOR SPECIFIED TIME.  
KEEP APPLYING LOAD UNTIL LOAD STABILIZES > IT MUST MAINTAIN THAT LOAD FOR 5 MINUTES > ACCEPTABLE CRITERIA: LOAD MUST MAINTAIN A MINIMUM OF 1900LB.

REVISIONS				
REV.	BY	DESCRIPTION	DATE	APP'VD
A	GP	CREATE DWG	8/28/09	
B	GP	ADD LOAD TEST TO DWG	3/9/10	
C	GP	ADD SWL NOTE	5/31/13	
D	GP	NOTE 3 WAS BRONZE MAG HOOK	2/28/14	

REF #	ITEM #	REQ	DESCRIPTION
			<p><b>TDI BROOKS INTL</b> 1902 PINON DR COLLEGE STATION, TEXAS 77845</p> <p><b>TITLE: PLASMA-JPC-TRIGGER-TUGGER-40FT</b> MODEL: JPC</p> <p>UNLESS OTHERWISE NOTED: INTERPRET DIM. &amp; TOL. PER ASME Y14.5M-1994 ALL DIMS. ARE IN INCHES TOLS: .XX:015 .XXX:005 ANGLES :1° DO NOT SCALE DRAWING</p> <p>SCALE: NONE</p> <p>DRAWING NUMBER: 1208</p> <p>SHEET 1 OF 1</p> <p>REV. D00</p>